



SmartControl Remote Pairing Procedure

1. On the Remote handset - activate the **SmartControl remote** by pressing and holding the two top buttons **UP** and **IN** together for approximately **3 seconds**.

Remote handset



2. On the SmartControl panel - switch **OFF** the winch **12V MASTER** switch.
3. On the SmartControl panel - simultaneously press and hold the LIFT WINCH switch **UP** and the RECOVERY WINCH switch **OUT**.
4. On the SmartControl panel - switch **ON** the 12V MASTER switch.
5. On the SmartControl panel - maintain the hold on the **UP** and **OUT** switches for approximately 6 seconds until a beeping sound commences.
6. On the Remote handset - within 10 seconds of the beeping initiation, press **any** button.

The pairing will conclude successfully upon cessation of the beeping.

SmartControl panel



Version 1.3 (10/12/2024)